


Soft Close Drawer Slide Installation Guide

Kitchen Concepts NSW

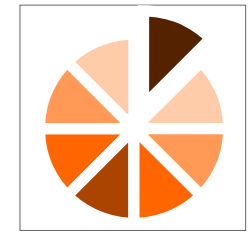

Kitchen Concepts NSW

Steps

1. Insert the supplied 5mm plastic spreader dowels only into the front holes at the appropriate height in the side of the cabinet. This height is shown in the documentation supplied in standard drawer boxes.
2. Mark a line exactly between the centre of the two holes at the height where the drawer runner will be located.
3. Using the supplied screw, now fix the front of the drawer runner to the cabinet. The hole shown in 3 should be lined up with hole the plastic dowel is located in.
4. Align drawer slide so it is level using the mark from step 2. Using the hole shown in red, screw the drawer slide into the cabinet. NO pre-drilled hole is supplied for this screw.

